

2


### **COOKTOP PARTS**

30" DROP-IN ELECTRIC OVEN SELF CLEAN

For Models:RS675PXGB14, RS675PXGQ14, RS675PXGT14 (Black) (White) (Biscuit)

Illus.


**Part** 

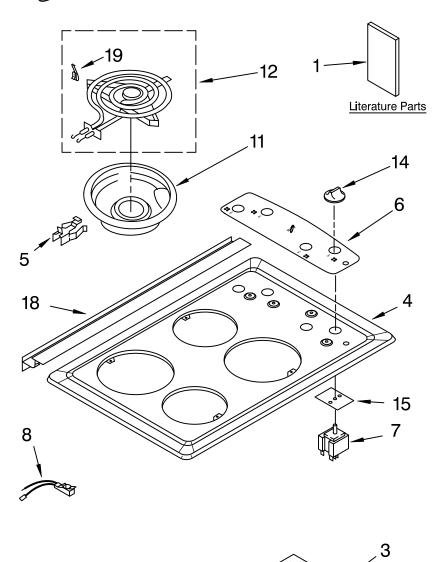

0


No.	No.	DESCRIPTION
1		Literaturre Parts
	8300649	Installation
	0000040	Instructions
	8300666	Use & Care Guide
	8302072	
	3191638	
2		Safe Cooking Tips
2 3	3192459	Burner Box
3	3192330	Bracket, Mounting
	3177991	Screw
4	000.4700	Cooktop
	8284709	
	3191168	White
_	3191167	Black
5	3192575	1, 0 ( )
_	3400843	Screw
6		Panel, Control
	8284707	Biscuit
	3191229	
	3191228	Black
7		Switch, Infinite
	3191471	Use W/6" Surface
		(Blue Shaft)
	3191473	Use W/8" Surface
		(Red Shaft)
	3400855	Screw, 8-32 x 1/4
8	4456181	Light, Indicator
11		Pan, Surface
	3195208	6" Pan
	3195209	8" Pan
12		Element, Surface
	8053266	6" Burner
	8053268	8" Burner
14		Knob, Control
	3196232	White
	8272506	Biscuit
	3196231	Black
15	3183956	Seal, Switch
		Shaft (4)
18		Trim, Extension
	3192103	
	8300518	Biscuit
	3192102	Black
19	3195917	Clip, Element
		•

# **CONTROL PANEL PARTS**

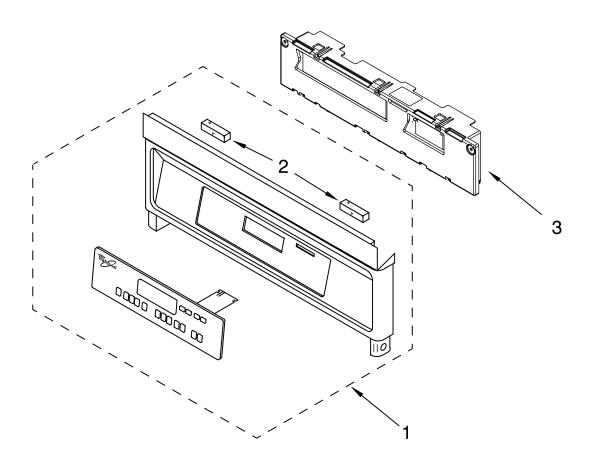


Illus. No.	Part No.	DESCRIPTION
1		Control Panel Assy.
·	4456311	,
	4456309	Biscuit
	4456312	Black
		W/Membrane Switch
	3400832	Screw
2	4451034	Gasket, Control
		Panel
3	8301919	Assy, Control
	4449745	Screw

### **OVEN PARTS**

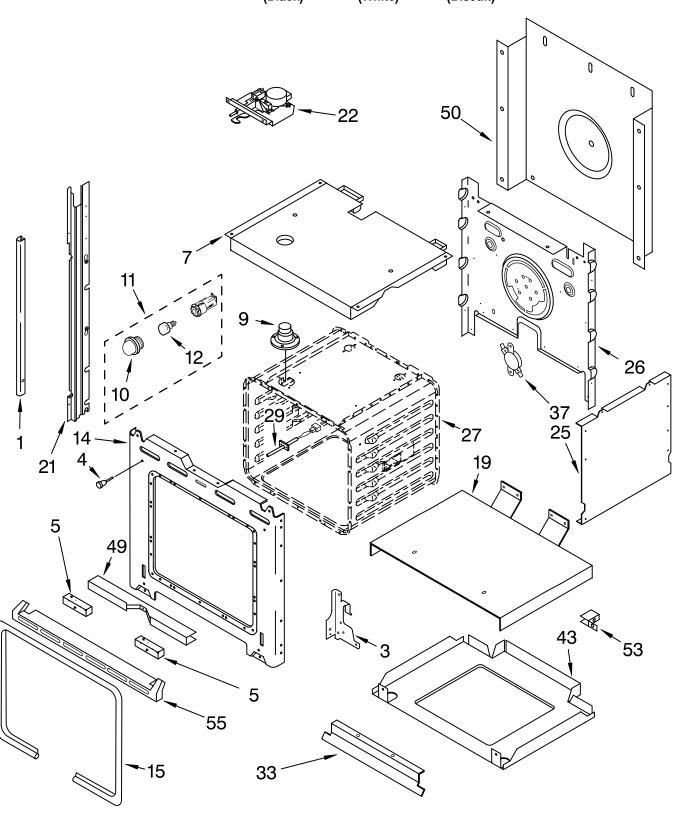


# **OVEN PARTS**


IIIus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side	14	9759060	Frame, Front	37	9759243	Thermostat (TOD)
		(Right Hand)		4449040				(Temp.) SPST
	4450845			4450118	Nut	43		Base, Chassis
	4452120	Biscuit	15	4455382	Gasket, Door	49	4448933	Retainer, Gasket
	4450844	Black	19	4451478	Support, Insulation		4449154	Screw
		(Left Hand)		4449809	Screw	50	4451747	Cover, Back
	4450848		21		Rail, Side		4449809	=
	4452121	Biscuit		4450579	Right Side	53	4449845	Support, Bracket
	4450847	Black		4450580	Left Side		4449809	
	8281236	Screw		4448444	Grommet		4449809	
3		Hinge Receiver		4449154	Screw	55		Trim, Bottom
	4455605	Left Hand	22		Latch, Motorized		4448478	White
		Right Hand		4449154	=		4452415	
4	4448520	Bumper, Door	25	4455641	Side, Chassis		4448477	Black
5	4452260	Spacer, Foam			(R.H. & L.H.)	l ———		
7	4455865	Top Chassis		4449809	Screw		FOLLOV	VING PARTS
	4449809	Screw	26		Back, Chassis		NOT ILL	USTRATED
9		Tube, Vent		4449809		l ——		
	3196176		27		Liner, Oven			
10		Lens, Light			(Not serviceable)	INSU	JLATION	
11		Oven Light Assy	29	4455636				
12	4452166	Bulb, Light		4449154			4449316	Insulation, Wrap
			33	4457117	Deflector, Vent			Insulation, Back

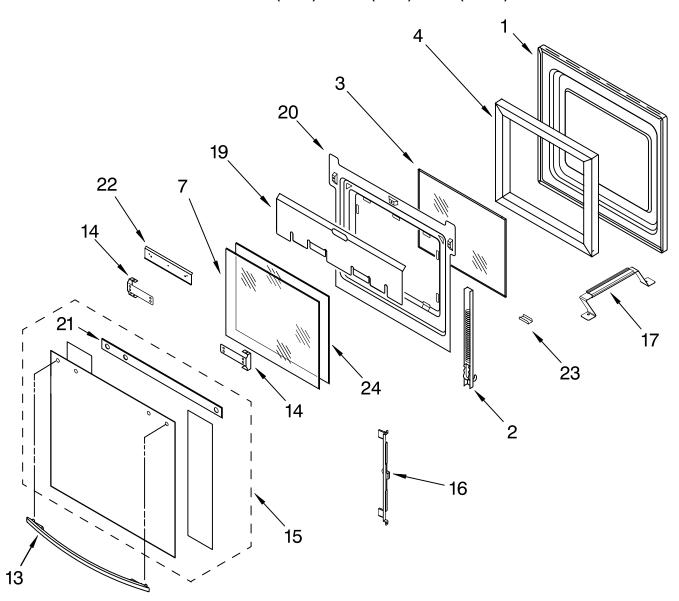

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 2 3 4 7 13	4457127 8300571 8300572 4449743 4449259 4451722	Door Liner Hinge, Door R.Side L.Side Screw Glass, Inner Insulation, Door Glass, Inner Door Handle White Biscuit	14 15 16 17	4450813 4451040 8300899 8300894 8300903 9759229	Bracket, Handle Screw Door Assembly, Glass White Biscuit	19 20 21 22 23	4457103 4449809 4457132 4449809 8300820 4457114 4450864 4452119 4450863	Shield, Heat Screw Retainer, Glass Screw Seal, Door Top Shield, Heat (Btm) Retainer, Clip White Biscuit


INTERNAL OVEN PARTS
For Models:RS675PXGB14, RS675PXGQ14, RS675PXGT14
(Black) (White) (Biscuit)

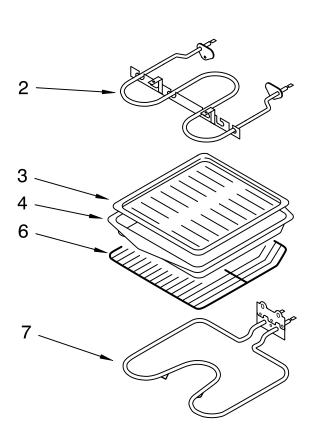

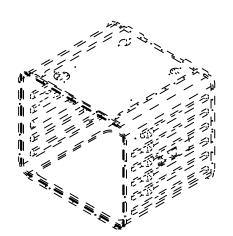

Illus. No.	Part No.	DESCRIPTION
2	4456103	Element, Broil
	4449154	Screw
3	4457277	Grill, Broiler
4	4457276	Pan, Broiler
6	4448717	Rack, Oven
	9759322	Pad, Rack
7	4452153	Element, Bake
	4449154	Screw

# **TOP VENTING PARTS**

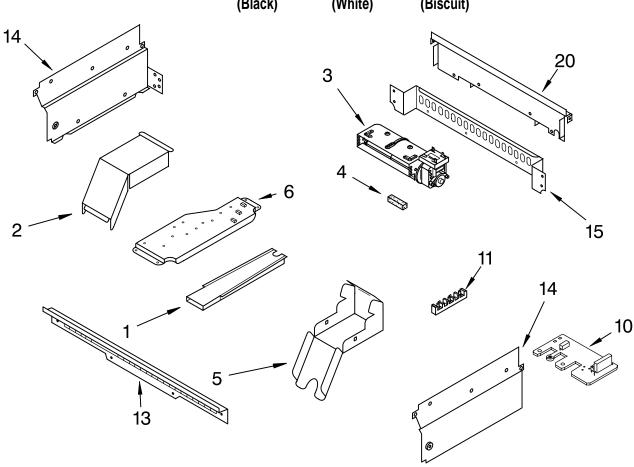

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1		Vent, Exhaust Screw, 8–18 x 3/8	10 11		Suppressor Block, Terminal	14	3191832	Side, Control Compt.
2	4455178	Elbow, Vent Top		3400080	•		3191833	
3		Blower, 65MM	13	4448549	Vent,		4449809	Screw
4		Block, Foam			(Control Panel)	15	9759135	Back, Control
5		Elbow, Vent Bottom		4450038	Screw		4449809	Screw
6	4451761	Plate, Service				20	3191842	Cover, Rear

### **OPTIONAL PARTS**

Illus. Part No. No. DESCRIPTION	Illus. Part   No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
	No.   No.   DESCRIPTION	No.   No.   DESCRIPTION
	200 c Red) 242826 Wire (14 Ga. 150 c White) 242827 Wire (14 Ga. 150 c Yellow) 242832 Wire (14 Ga. 200 c Yellow)	4448950 Screw, Install (4)